


CAVIX®


AT2542H旅行三脚架使用指南

AT2542H Travel Tripod User Manual

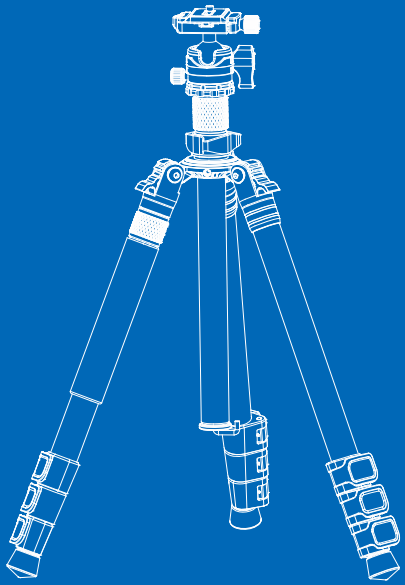

中山精格电子科技有限公司
Zhongshan Jingge Electronic Technology Co., Ltd.



三脚架解析/Tripod Details

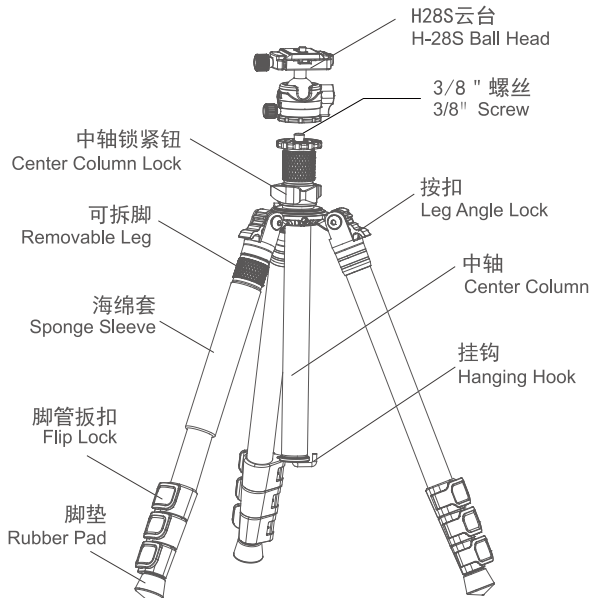

规格/Specifications

Model # 型号	AT2542H	Max/Min Height 最大/最小高度	2000/464mm (78.74/18.27in)
Main Material 主要材质	Aluminum Alloy 铝合金	Folded Height 折叠高度	464mm (18.27in)
Weight 产品重量	1.67Kg (3.68lb)	Sections 脚管节数	4
Tube Diameter 管径尺寸	25/22/19/16mm	Loading Capacity 承重	6kg (13.23lb)


云台解析/Ball Head Details

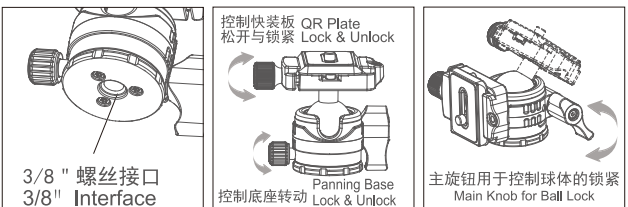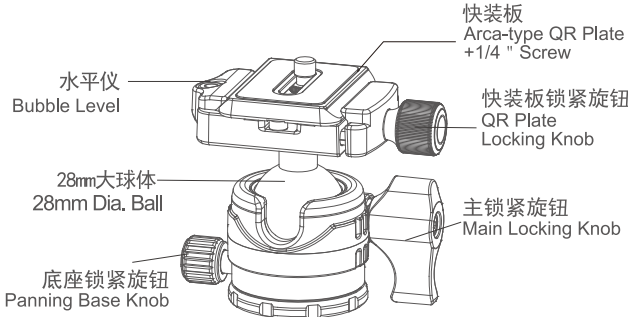

规格/Specifications

Model # 型号	H-28S	Max Height 云台高度	67mm (2.64in)
Main Material 主要材质	Aluminum Alloy 铝合金	Base Dia. 底部直径	41mm (1.61in)
Weight 产品重量	0.19Kg (0.42lb)	Loading Capacity 承重	6kg (13.23lb)
Ball Diameter 球体直径	28mm (1.10in)	Size of QR Plate 快装板尺寸	43*38*6mm (1.69*1.50*0.24in)

角度调节/Adjust Leg Angles

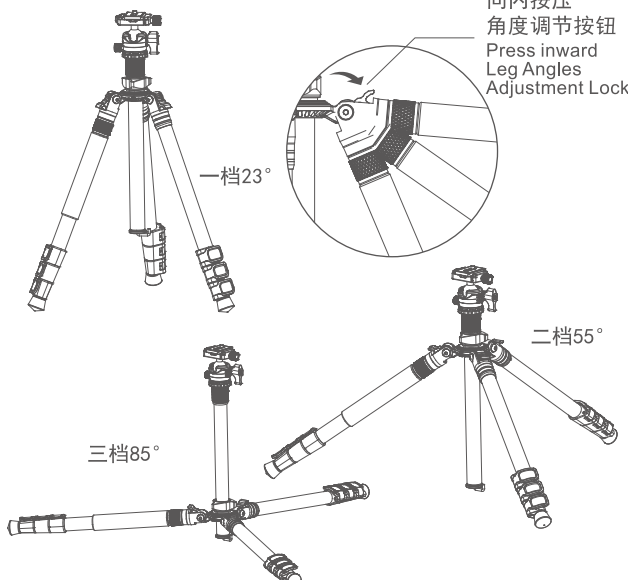


三脚架角度调节/Leg Angles Adjustment:

该三脚架的每只支撑脚均可调节三种支撑角度，以适应不同的拍摄要求。如上图所示：向内按压角度调节按钮，同时扳动脚管至相应角度，然后松开角度调节按钮即可锁住角度。

Every leg of the tripod has 3 alternative leg angles adapt to different photography requirement


- 1.Press inward the leg angles adjustment lock.
- 2.Stay leg angle lock to one of the three cutting seat.
- 3.Release the leg angle lock to secure the angle setting.

中轴倒置/Invert Center Column

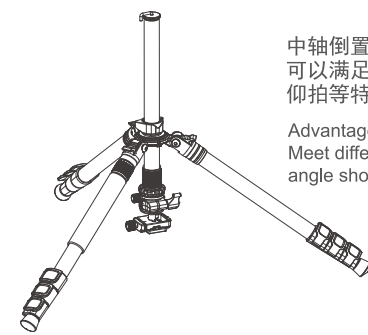

中轴倒置优点：
可以满足更低角度拍摄、微距拍摄仰拍等特殊摄影创作需要。

Advantages of Inverted Center Column:
Meet different photography needs like low angle shooting, macro photography, etc.

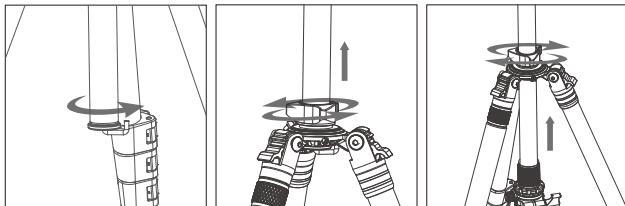


中轴倒置操作方式/Way of Inverting Center Column:

- 操作如上图所示：
1. 拧出中轴下面的挂钩；
 2. 拧松中轴锁紧钮去除中轴；
 3. 把中轴如图倒穿过脚架到适合的高度，锁紧中轴旋钮即可

As shown in illustration:


- 1.Screw out the hook under the center column.
- 2.Loose the center column knob and take out center column.
- 3.Reverse the center column and lock the knob.

高度调节/Adjust Height of Legs

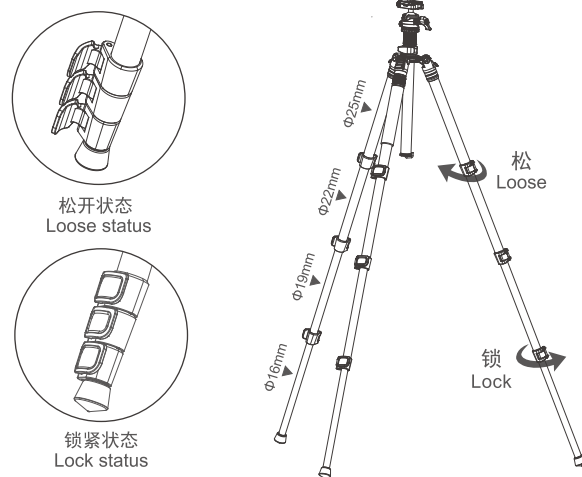


*扳开锁紧扣，即可拉出脚管调节高度，按下锁紧扣，即可固定脚管
Pull the flip clip to release the foot tube to desired height, press it back to fixed.

中轴升高调节/Adjust Height of Center Column

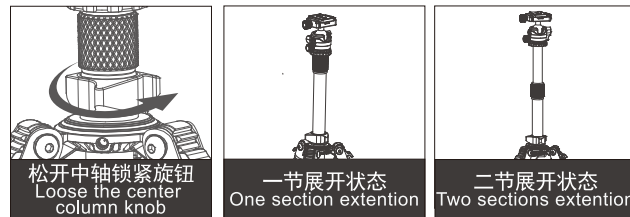

反折收纳/Reverse Folding

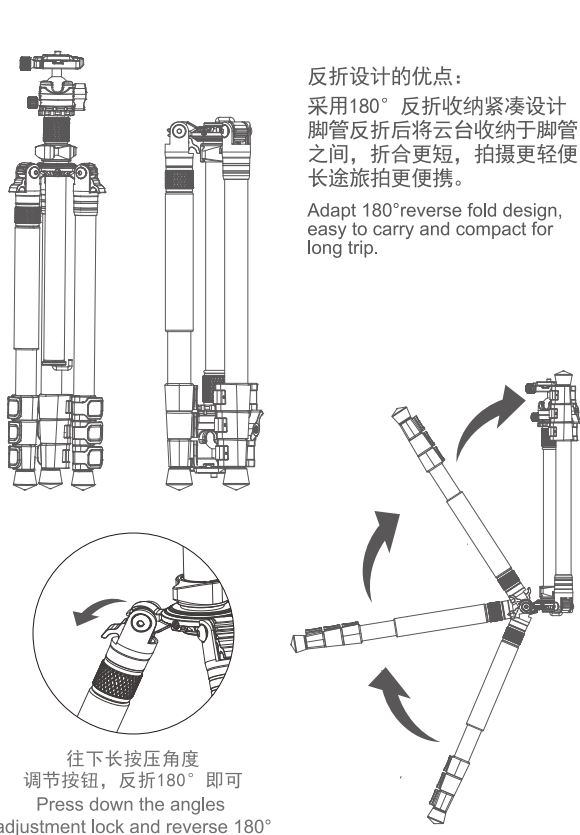

独脚架转换/Convert to Monopod

独脚架的优点：

拆成独脚架，满足运动赛事等机动性精彩画面，远途旅拍可做登山杖

Advantages of the monopod: Combine detachable leg with center column into a monopod, which can be used for sport events, long trip, climbing.

旋转拆下独脚
Screw out leg and center column

独脚顶端为3/8" 螺牙
可连接其他设备
Monopod with 3/8" screw for other devices

独脚架展示1
Monopod Display 1
(云台+独脚架)
(Ball head + Monopod)

独脚架展示2
Monopod Display 2
(云台+中轴+独脚架)
(Ball head+Center Column + monopod)

注意事项

1. 不要超过最大的制定负重。
2. 当使用产品时，时常锁紧其安全装置。
3. 切勿在温度低于零下40摄氏度及高于100摄氏度使用，当在潮湿/沙地/布满尘埃的环境下使用后，谨记将产品弄干及清洁，不建议在海水中使用。
4. 切勿将产品长时间放在太阳下暴晒及避免高温环境。
5. 建议在运输过程中，将设备（例如相机）从脚架上取下。
6. 使用温和清洁剂及柔软毛巾清洁，将尘埃及沙粒从所有锁制及活动部件清除。
7. 除非有需要，此设备无需定期添加润滑油。如确实需要时，请使用标准润滑油。
8. 为自身安全着想，切勿将产品接触任何电源。



温馨提示

在使用脚架拍摄且需要移动位置时，请将相机从三脚架上取下，切勿将相机装在脚架上一一起移动，剧烈的晃动（特别是安装了长镜头的相机）可能会使转接螺丝断裂。进而损坏相机。

伸展脚管时，请从最大管径的脚管到最小管径的脚管的顺序伸展。收纳脚管时，请从最小管径的脚管到最大管径的脚管的顺序收纳。

NOTICE

- 1.Do not exceed the specified load capacity.
- 2.Make sure to lock and keep safe when operating the tripod.
- 3.Do not use a tripod when the temperature is lower than minus 40 degrees or higher than 100 degrees.
- 4.Please clean the tripod when it is getting dirty or wet, do not use it in the sea.
- 5.Do not expose product under direct sunshine or high temperature for a long time.
- 6.Make sure all devices (e.g. cameras) were taken down from the tripod before transportation.
- 7.Keep the tripod and all accessories clean before packing for storage.
- 8.Unless necessary, the equipment does not need to be lubricated regularly. Please use the standard lube only if needed.
- 9.To ensure safety, do not connect the tripod with any power supply.



Warning

Please remove camera from the tripod before moving the tripod to other locations for shooting to avoid any damage to the camera, as violent shaking may break the camera screw thus break the camera, especially the camera with telephoto lens. Extend the tripod legs in the order of from max tube to min tube, while fold the legs in the order of from min tube to max tube.

保修卡

尊敬的客户：

感谢您购买凯唯斯的产品！在正常使用过程中，如果因器材本身的材料及工艺出现质量问题，凯唯斯将会提供免费的保修服务。在需要保修服务时，请提供本保修卡和购买凭证（收据或发票，须有商家盖章）。

凯唯斯公司售后服务热线0760-88361108

产品型号：_____ 购买时间：_____

用户名称：_____ 购买渠道：_____

用户电话：_____ 邮政编码：_____

用户地址：_____

顾客须知：

- (1) 凯唯斯产品，享受3年免费保修，保修时间从购买之日起算；
- (2) 所保修产品，必须是在凯唯斯正式授权的经销商或电子商务所购买；
- (3) 需寄回凯唯斯工厂维修的，请先拨打凯唯斯服务电话，待确认故障后，凯唯斯公司承担来回运费，一般性故障可在七个工作日内完成维修并寄回。

以下情况不在保修范围：

- (1) 超过保修期限的；
- (2) 在非凯唯斯正授权经销商处购买的；
- (3) 在未获凯唯斯授权的代理商或维修中心维修过的；
- (4) 由于不正当操作、意外事件、自然灾害导致的故障或损伤。

WARRANTY CARD

Dear valued customer,

Thanks for using CAVIX's products,if you have any question on using our products,such as on material or technology or other about the quality, and product still on the period of maintance,please contact our below phone number directly for maintance with invoice. thanks.
Tel:86-760-88361108

Model#: _____ Purchase Date: _____

Name: _____ Purchase Route: _____

Tel: _____ Post Code: _____

Add: _____

NOTICE:

- (1) The warranty time is always 3 years since cargo dispatch time.
- (2) All maintance products should be purchased from CAVIX authorized stores.
- (3) Do please contact us first before your product was sent out, and we need about 7 working days after we got the equipment in general.

Out of Warranty:

- (1) Not in the valid date of guarantee.
- (2) Not purchased from CAVIX authorized store.
- (3) Maintanced not in the authorized stores.
- (4) Product damaged was caused by operation incorrectly or accident or Natural disaster.